


PARTS LIST


Ref#	Description	Part#	QTY
1	Hexagon bolt with flange screw (M6X25)	321177	12 pcs
2	26"Frame of Cabinet with door	47308	1 pc
3	26"Closet frame	47288	1 pc
4	34"Cabinet frame	47296	1 pc
5	26"Skirting board	47289	2 pcs
6	86"Wooden work plate	47306	1 pc
7	34"Skirting board	47303	1 pc
8	26"&34"closet side board	47389	1 pc

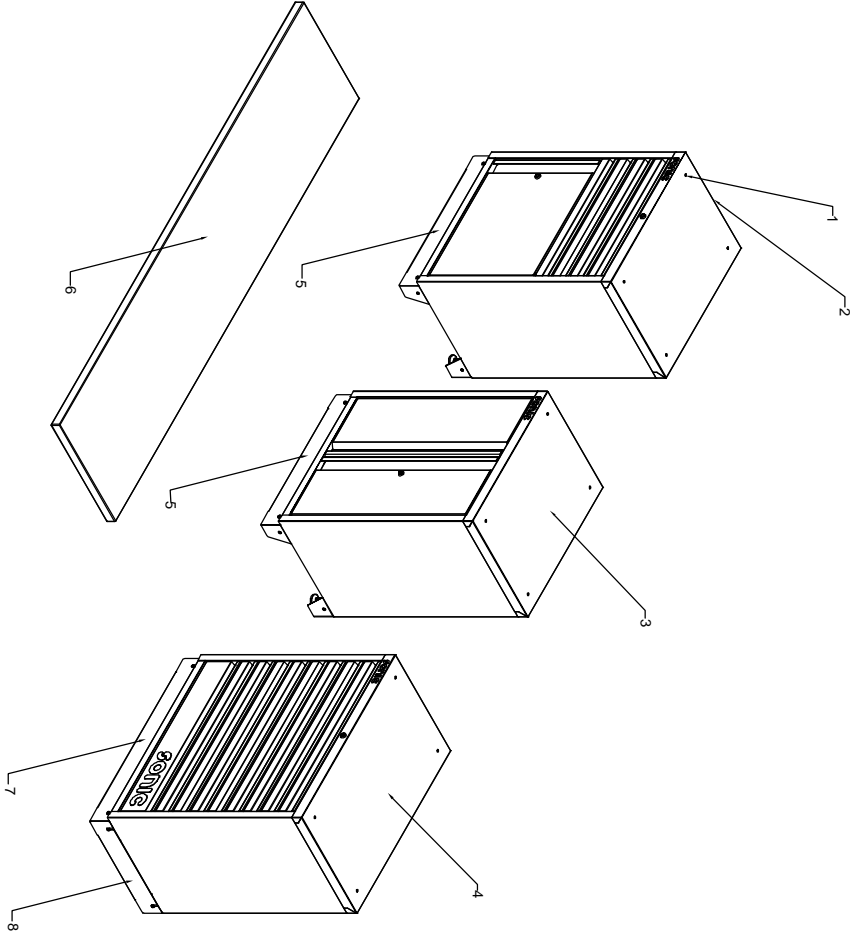

ASSEMBLY INSTRUCTIONS


1. INSTALL ADJUSTABLE SHELF

Decide the height of the adjustable shelf onto the tongues on both side panels. Insert the bolts into the side panels. Place the shelf on the bolts. Make sure slot B go into box first.

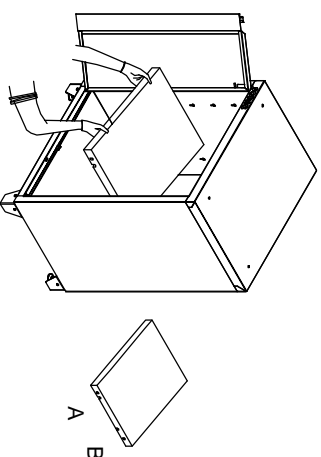


2. ADJUST LEVELER

Adjust the levelers and make the whole unit to stable state.

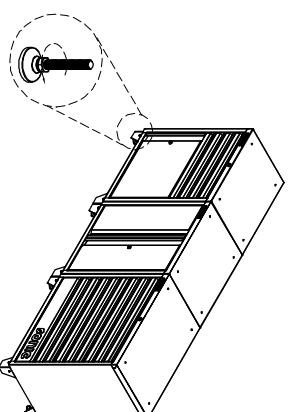


3. PRE-DRILL HOLES OF WOODEN WORK PLATE

Pre-drill twelve small holes under the wooden work plate for easily installing.

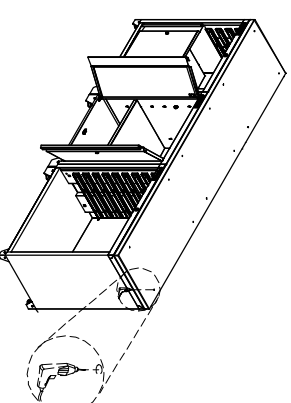

4. INSTALL WOODEN WORK PLATE

Position the wooden work plate on the top of cabinets. Remove the top drawer of cabinet and open the 2-door cabinet. Insert the Hexagon bolt with flange screws (M6X25) through the top of cabinet, and into the bottom of the wooden worktop. Tighten securely. Reinstall the drawers.

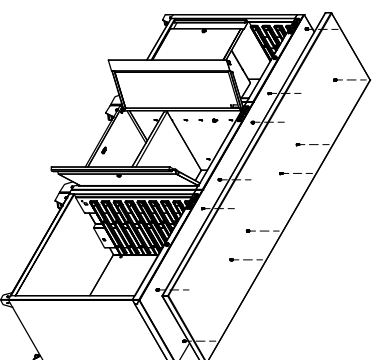

5. INSTALL SKIRTING BOARDS

Position the skirting boards on the legs of cabinets. Insert the Truss head screw (M6X 12, stainless) through the legs. Tighten securely. Repeat the steps for other skirting boards.

